


For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

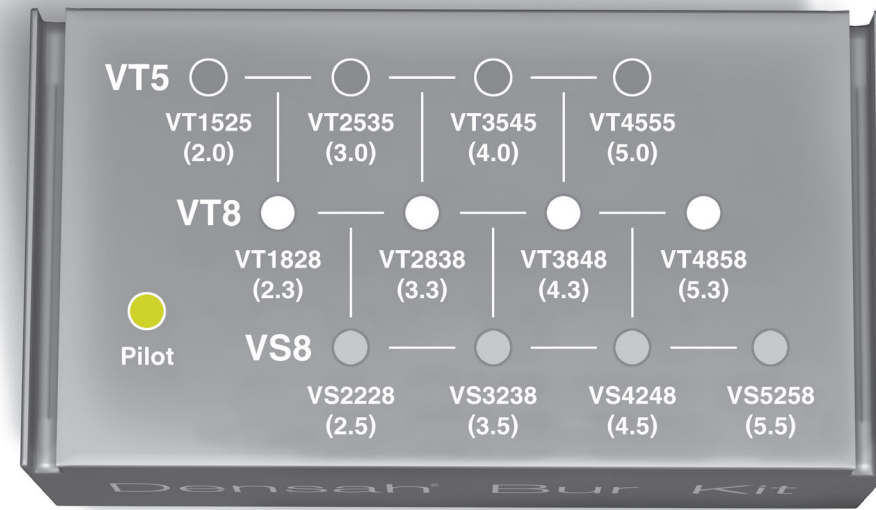

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs

BioHorizons®			External																	
			Soft Bone							Hard Bone (Mandible)										
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.																	
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Bur 9	Densah® Bur Block Display
Taper	3.5		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	—	
Taper	4.0		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VS3238* (3.5)	—	—	—	—	—	
Taper	5.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	—	—	
Taper	6.0		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858 (5.3)	VS5258* (5.5)	—	

*Denotes implant placement.


Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

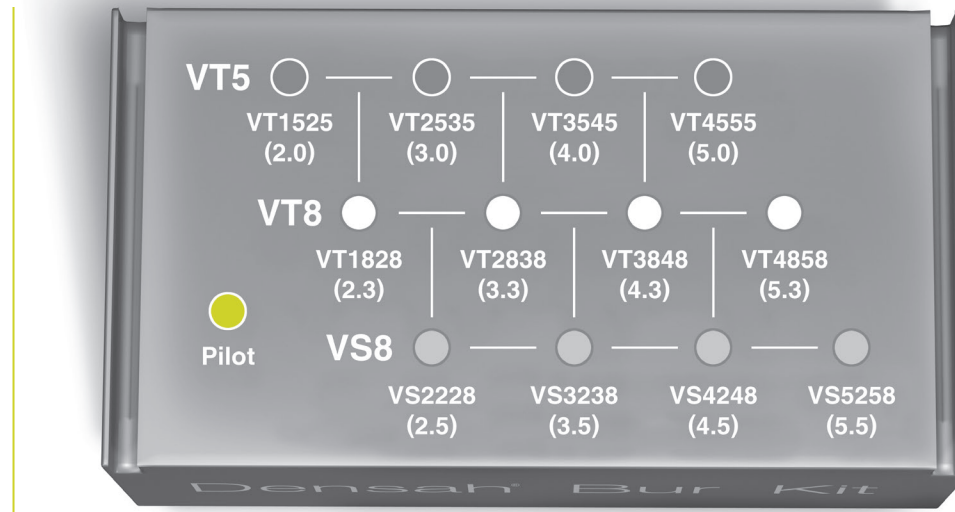

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																		
BioHorizons®			Internal															
			Soft Bone					Hard Bone (Mandible)										
								In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.										
Geometry	Body Ø	Platform Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Straight	3.5	3.5	Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	—	
Straight	4.0	4.5	Pilot	VT1828 (2.0)	VT2838 (3.0)	VT3545** (4.0)	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545** (4.0)	—	—	—	
Straight	5.0	5.7	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545 (4.0)	VT4555** (5.0)		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858** (5.3)	
Straight	6.0	6.0	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858 (5.3)	VS5258* (5.5)	

*Denotes implant placement.

**Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement

10374 REV02


Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

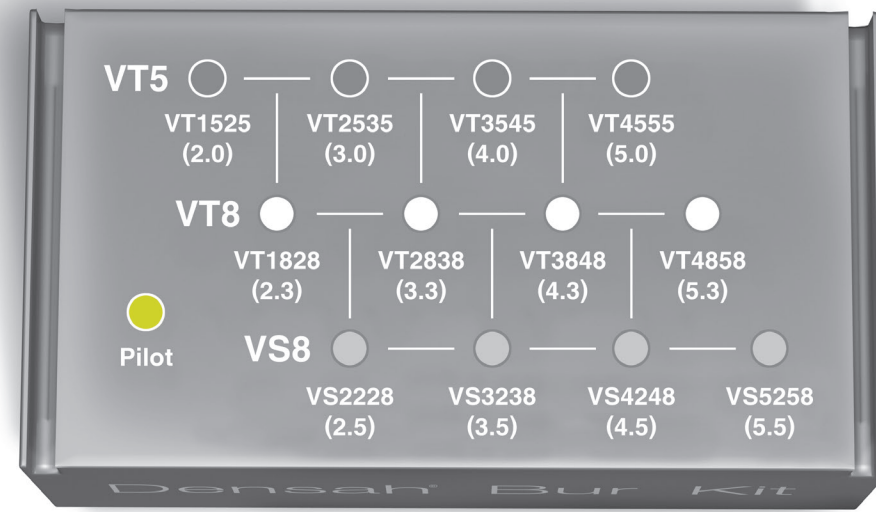

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																			
BioHorizons®			Tapered Internal																
			Soft Bone							Hard Bone (Mandible)									
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.																
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Taper	3.4		Pilot	VT1525 (2.0)	VS2228* (2.5)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535** (3.0)	—	—	—	—	—	
Taper	3.8		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	—	
Taper	4.6		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848** (4.3)	—	—	—	
Taper	5.8		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545 (4.0)	VT4555* (5.0)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858* (5.3)	—	

*Denotes implant placement.

**Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement


Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

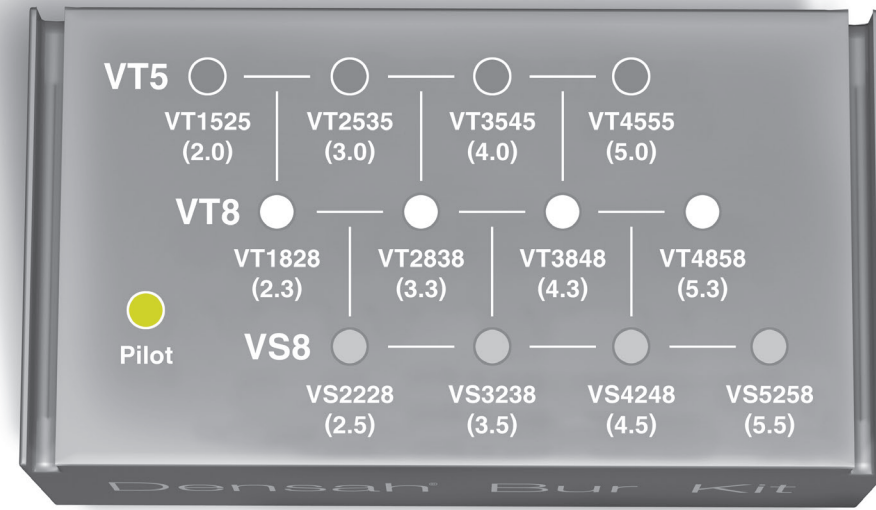

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																			
BioHorizons®			Tapered Internal Plus Dental Implant																
			Soft Bone							Hard Bone (Mandible)									
										In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.									
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Taper	3.8		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	—	
Taper	4.2		Pilot	VT1828 (2.3)	VT2838 (3.3)	VS3238* (3.5)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545** (4.0)	—	—	—	
Taper	4.6		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848** (4.3)	—	—	
Taper	5.8		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545 (4.0)	VT4555* (5.0)	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858* (5.3)	

*Denotes implant placement.

**Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement

10374 REV02


Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

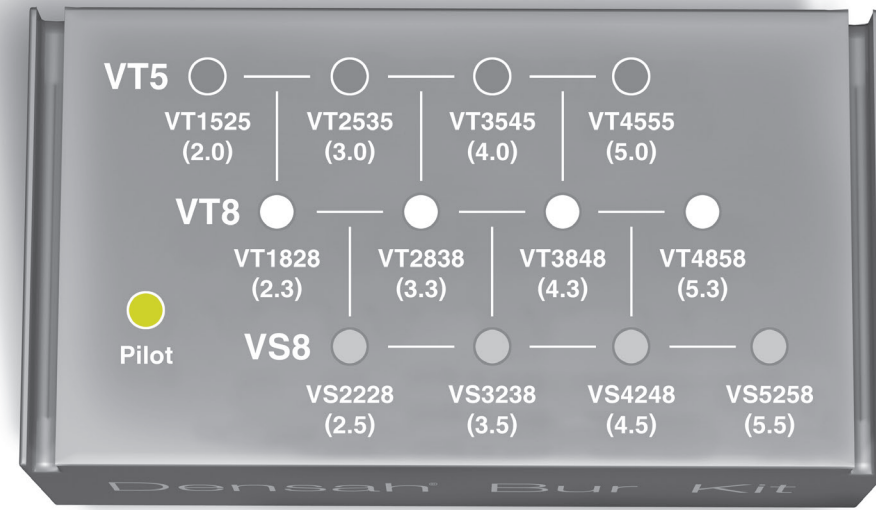

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																			
BioHorizons®			Tapered Internal Tissue Level Dental Implant																
			Soft Bone							Hard Bone (Mandible)									
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.																
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Taper	3		Pilot	VT1828 (2.3)	VS2228* (2.5)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VS2228* (2.5)	—	—	—	—	—	
Taper	3.8		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	—	—	—	—	
Taper	4.6		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848** (4.3)	—	—	—	
Taper	5.8		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545 (4.0)	VT4555* (5.0)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858* (5.3)	—	

*Denotes implant placement.

**Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement


Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

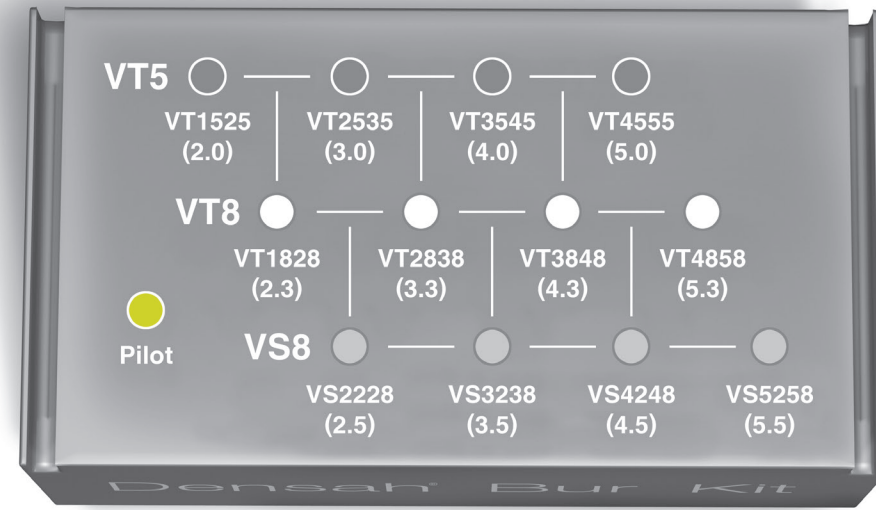

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs

BioHorizons®			Tapered Pro Implant															
			Soft Bone							Hard Bone (Mandible)								
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.															
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Densah® Bur Block Display
Taper	3.8		Pilot	VT1525 (2.0)	VT2535* (3.0)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	
Taper	4.2		Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535 (3.0)	VT2838* (3.3)	VS3238* (3.5)	—	—	
Taper	4.6		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	
Taper	5.2		Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848* (4.3)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VS4248* (4.5)	—	

*Denotes implant placement.


**Only take the Densah Bur to the (5mm laser mark) depth to slightly open up the crestal diameter to avoid any possible excessive crestal bone strain during implant placement
Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

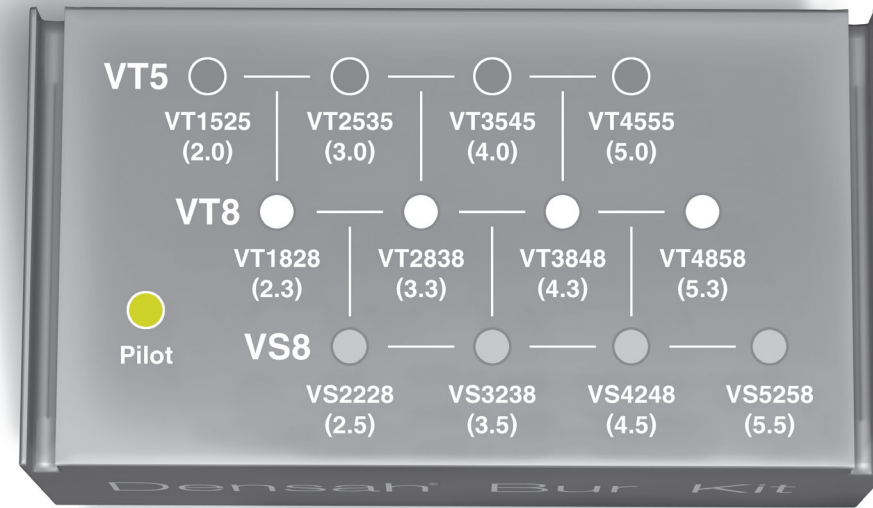

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs																			
BioHorizons®			Tapered Short																
			Soft Bone							Hard Bone (Mandible)									
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.																
Geometry	Major Ø	Length	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display
Tapered	4.6	6.0	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	—	
Tapered	4.6	7.0	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	—	
Tapered	4.6	7.5	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	—	
Tapered	5.8	6.0	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858 (5.3)	VS5258* (5.5)	
Tapered	5.8	7.5	Pilot	VT1828 (2.3)	VT2838 (3.3)	VT3848 (4.3)	VT4858* (5.3)	—		Pilot	VT1525 (2.0)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848 (4.3)	VT4555 (5.0)	VT4858 (5.3)	VS5258* (5.5)	

*Denotes implant placement.


Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System

For short implant placement, implant major diameter needs to be \leq the bur (average diameter) at the 8mm laser mark. Please refer to page 16 in the Instructions for Use Manual.

In Ridge Expansion cases, please oversize your osteotomy and make sure that the crest diameter is equal to or larger than the implant major diameter.

In Hard Bone (Mandible), after Finishing the Full Osteotomy Preparation, Use the Next Larger Size Densah Bur to the 3mm Laser-Mark Depth to make sure the Osteotomy Crestal Diameter is Equal to or Larger than the Implant Major (Crestal) Diameter.

Use Densah Burs in full-step increments for Sinus Lift cases. Example: 2.0mm, 3.0mm, 4.0mm, 5.0mm

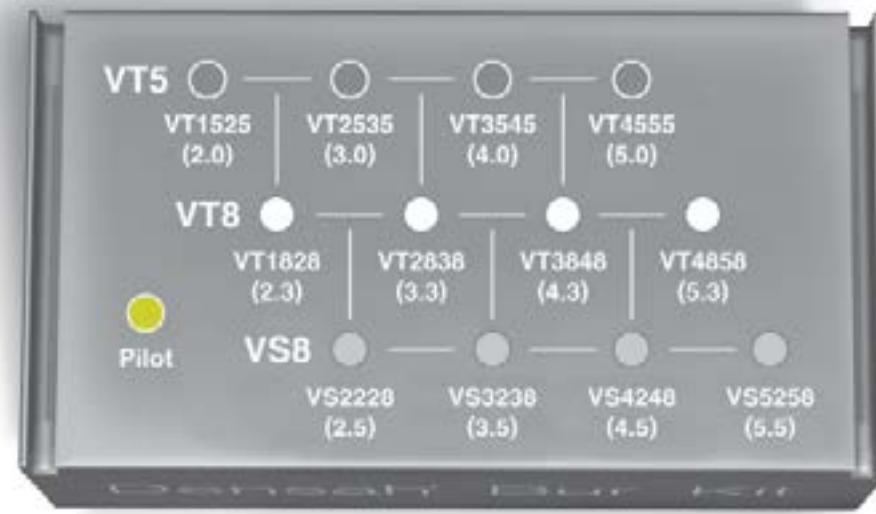

Use large block display to compare Bur identification system when using the schematic below for proper Bur usage

● VT5 Set ○ VT8 Set ● VS8 Set

Densifying Mode CCW (800-1500) RPMs / Cutting Mode CW (800-1500) RPMs

BioHorizons®			Conelog Progressive Implants																	
			Soft Bone							Hard Bone (Mandible)										
			In densifying mode make sure your osteotomy is 1.0 mm deeper than the actual implant final length. In extreme hard bone, utilize DAC (Densify After Cut) Protocol. Find protocol in IFU.																	
Geometry	Major Ø	Minor Ø	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Densah® Bur Block Display	Pilot	Bur 1	Bur 2	Bur 3	Bur 4	Bur 5	Bur 6	Bur 7	Bur 8	Densah® Bur Block Display	
Taper	3.3	2.2	Pilot	VT1525 (2.0)	VS2228* (2.5)	—	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	—	
Taper	3.8	2.7	Pilot	VT1828 (2.3)	VS2228 (2.5)	VT2535* (3.0)	—	—		Pilot	VT1525 (2.0)	VT1828 (2.3)	VT2535* (3.0)	—	—	—	—	—	—	
Taper	4.3	2.7	Pilot	VT1828 (2.3)	VT2838* (3.3)	—	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545* (4.0)	—	—	—	—	—	
Taper	5.0	3.2	Pilot	VT1525 (2.0)	VT2535 (3.0)	VT3545* (4.0)	—	—		Pilot	VT1828 (2.3)	VT2535 (3.0)	VT2838 (3.3)	VT3545 (4.0)	VT3848* (4.3)	—	—	—	—	

*Denotes implant placement. Clinician judgement and experience should be applied in conjunction with this suggestive Implant Drilling System